

DL205 PLC User Manual

Volume 1 of 2

Manual Number: D2-USER-M



Notes

⚡ WARNING ⚡

Thank you for purchasing automation equipment from **AutomationDirect.com**[®], doing business as, **AutomationDirect**. We want your new automation equipment to operate safely. Anyone who installs or uses this equipment should read this publication (and any other relevant publications) before installing or operating the equipment.

To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and usually change with time. It is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation is in compliance with the latest revision of these codes.

At a minimum, you should follow all applicable sections of the National Fire Code, National Electrical Code, and the codes of the National Electrical Manufacturer's Association (NEMA). There may be local regulatory or government offices that can also help determine which codes and standards are necessary for safe installation and operation.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

Our products are not fault-tolerant and are not designed, manufactured or intended for use or resale as on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the product could lead directly to death, personal injury, or severe physical or environmental damage ("High Risk Activities"). **AutomationDirect** specifically disclaims any expressed or implied warranty of fitness for High Risk Activities.

For additional warranty and safety information, see the Terms and Conditions section of our catalog. If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call us at 770-844-4200.

This publication is based on information that was available at the time it was printed. At **AutomationDirect** we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Trademarks

This publication may contain references to products produced and/or offered by other companies. The product and company names may be trademarked and are the sole property of their respective owners. **AutomationDirect** disclaims any proprietary interest in the marks and names of others.

Copyright 2010, **AutomationDirect.com** Incorporated
All Rights Reserved

No part of this manual shall be copied, reproduced, or transmitted in any way without the prior, written consent of **AutomationDirect.com** Incorporated. **AutomationDirect** retains the exclusive rights to all information included in this document.

⚡ AVERTISSEMENT ⚡

Nous vous remercions d'avoir acheté l'équipement d'automatisation de **AutomationDirect.com**MC, en faisant des affaires comme, **AutomationDirect**. Nous tenons à ce que votre nouvel équipement d'automatisation fonctionne en toute sécurité. Toute personne qui installe ou utilise cet équipement doit lire la présente publication (et toutes les autres publications pertinentes) avant de l'installer ou de l'utiliser.

Afin de réduire au minimum le risque d'éventuels problèmes de sécurité, vous devez respecter tous les codes locaux et nationaux applicables régissant l'installation et le fonctionnement de votre équipement. Ces codes diffèrent d'une région à l'autre et, habituellement, évoluent au fil du temps. Il vous incombe de déterminer les codes à respecter et de vous assurer que l'équipement, l'installation et le fonctionnement sont conformes aux exigences de la version la plus récente de ces codes.

Vous devez, à tout le moins, respecter toutes les sections applicables du Code national de prévention des incendies, du Code national de l'électricité et des codes de la National Electrical Manufacturer's Association (NEMA). Des organismes de réglementation ou des services gouvernementaux locaux peuvent également vous aider à déterminer les codes ainsi que les normes à respecter pour assurer une installation et un fonctionnement sûrs.

L'omission de respecter la totalité des codes et des normes applicables peut entraîner des dommages à l'équipement ou causer de graves blessures au personnel. Nous ne garantissons pas que les produits décrits dans cette publication conviennent à votre application particulière et nous n'assumons aucune responsabilité à l'égard de la conception, de l'installation ou du fonctionnement de votre produit.

Nos produits ne sont pas insensibles aux défaillances et ne sont ni conçus ni fabriqués pour l'utilisation ou la revente en tant qu'équipement de commande en ligne dans des environnements dangereux nécessitant une sécurité absolue, par exemple, l'exploitation d'installations nucléaires, les systèmes de navigation aérienne ou de communication, le contrôle de la circulation aérienne, les équipements de survie ou les systèmes d'armes, pour lesquels la défaillance du produit peut provoquer la mort, des blessures corporelles ou de graves dommages matériels ou environnementaux («activités à risque élevé»). La société **AutomationDirect** nie toute garantie expresse ou implicite d'aptitude à l'emploi en ce qui a trait aux activités à risque élevé.

Pour des renseignements additionnels touchant la garantie et la sécurité, veuillez consulter la section Modalités et conditions de notre documentation. Si vous avez des questions au sujet de l'installation ou du fonctionnement de cet équipement, ou encore si vous avez besoin de renseignements supplémentaires, n'hésitez pas à nous téléphoner au 770-844-4200.

Cette publication s'appuie sur l'information qui était disponible au moment de l'impression. À la société **AutomationDirect**, nous nous efforçons constamment d'améliorer nos produits et services. C'est pourquoi nous nous réservons le droit d'apporter des modifications aux produits ou aux publications en tout temps, sans préavis ni quelque obligation que ce soit. La présente publication peut aussi porter sur des caractéristiques susceptibles de ne pas être offertes dans certaines versions révisées du produit.

Marques de commerce

La présente publication peut contenir des références à des produits fabriqués ou offerts par d'autres entreprises. Les désignations des produits et des entreprises peuvent être des marques de commerce et appartiennent exclusivement à leurs propriétaires respectifs. **AutomationDirect** nie tout intérêt dans les autres marques et désignations.

Copyright 2010, **AutomationDirect.com** Incorporated
Tous droits réservés

Nulle partie de ce manuel ne doit être copiée, reproduite ou transmise de quelque façon que ce soit sans le consentement préalable écrit de la société **AutomationDirect.com** Incorporated. **AutomationDirect** conserve les droits exclusifs à l'égard de tous les renseignements contenus dans le présent document.

DL205 PLC USER MANUAL



Please include the Manual Number and the Manual Issue, both shown below, when communicating with Technical Support regarding this publication.

Manual Number: D2-USER-M
Issue: 4th Edition, Rev. A
Issue Date: 4/10

Publication History		
Issue	Date	Description of Changes
1st Edition	1/94	original edition
Rev. A	9/95	minor corrections
2nd Edition	6/97	added DL250, downsized manual
Rev. A	5/98	minor corrections
Rev. B	7/99	added torque specs for base and I/O
Rev. C	11/99	minor corrections
Rev. D	3/00	added new PID features, minor corrections
Rev. E	11/00	added CE information, minor corrections
Rev. F	11/01	added surge protection info, corrected RLL and DRUM instructions, minor corrections
3rd Edition	6/02	added DL250-1 and DL260 CPUs, local expansion I/O, ASCII and MODBUS instructions, split manual into two volumes
Rev A	8/03	extensive corrections and additions
4th Edition	11/08	changed publishing software resulting in change of appearance, addition of IBox instructions, changes to PID chapter, added info for ERM and EBC modules, other changes as necessary
Rev A	4/10	extensive corrections and additions

Notes

VOLUME ONE: TABLE OF CONTENTS



Volume One: Table of Contents	i
Volume Two: Table of Contents	xi
Chapter 1: Getting Started	1-1
Introduction	1-2
The Purpose of this Manual	1-2
Where to Begin	1-2
Supplemental Manuals	1-2
Technical Support	1-2
Conventions Used	1-3
Key Topics for Each Chapter	1-3
DL205 System Components	1-4
CPUs	1-4
Bases	1-4
I/O Configuration	1-4
I/O Modules	1-4
DL205 System Diagrams	1-5
Programming Methods	1-7
<i>DirectSOFT</i> Programming for Windows	1-7
Handheld Programmer	1-7
<i>DirectLOGIC</i>[™] Part Numbering System	1-8
Quick Start for PLC Validation and Programming	1-10
Steps to Designing a Successful System	1-13
Chapter 2: Installation, Wiring and Specifications	2-1
Safety Guidelines	2-2

Table of Contents

Plan for Safety	2-2
Three Levels of Protection	2-3
Emergency Stops	2-3
Emergency Power Disconnect	2-4
Orderly System Shutdown	2-4
Class 1, Division 2, Approval	2-4
Mounting Guidelines	2-5
Base Dimensions	2-5
Panel Mounting and Layout	2-6
Enclosures	2-7
Environmental Specifications	2-8
Power	2-8
Marine Use	2-9
Agency Approvals	2-9
24 VDC Power Bases	2-9
Installing DL205 Bases	2-10
Choosing the Base Type	2-10
Mounting the Base	2-10
Using Mounting Rails	2-11
Installing Components in the Base	2-12
Base Wiring Guidelines	2-13
Base Wiring	2-13
I/O Wiring Strategies	2-14
PLC Isolation Boundaries	2-14
Powering I/O Circuits with the Auxiliary Supply	2-15
Powering I/O Circuits Using Separate Supplies	2-16
Sinking / Sourcing Concepts	2-17
I/O “Common” Terminal Concepts	2-18
Connecting DC I/O to “Solid State” Field Devices	2-19
Solid State Input Sensors	2-19
Solid State Output Loads	2-19
Relay Output Guidelines	2-21
Surge Suppression For Inductive Loads	2-21
I/O Modules Position, Wiring, and Specification	2-25
Slot Numbering	2-25
Module Placement Restrictions	2-25

Special Placement Considerations for Analog Modules	2-26
Discrete Input Module Status Indicators	2-26
Color Coding of I/O Modules	2-26
Wiring the Different Module Connectors	2-27
I/O Wiring Checklist	2-28
D2-08ND3, DC Input	2-29
D2-16ND3-2, DC Input	2-29
D2-32ND3, DC Input	2-30
D2-32ND3-2, DC Input	2-31
D2-08NA-1, AC Input	2-32
D2-08NA-2, AC Input	2-33
D2-16NA, AC Input	2-34
F2-08SIM, Input Simulator	2-34
D2-04TD1, DC Output	2-35
D2-08TD1, DC Output	2-36
D2-08TD2, DC Output	2-36
D2-16TD1-2, DC Output	2-37
D2-16TD2-2, DC Output	2-37
F2-16TD1(2)P, DC Output With Fault Protection	2-38
F2-16TD1P, DC Output With Fault Protection	2-39
F2-16TD2P, DC Output with Fault Protection	2-40
D2-32TD1, DC Output	2-41
D2-32TD2, DC Output	2-41
F2-08TA, AC Output	2-42
D2-08TA, AC Output	2-42
D2-12TA, AC Output	2-43
D2-04TRS, Relay Output	2-44
D2-08TR, Relay Output	2-45
F2-08TR, Relay Output	2-46
F2-08TRS, Relay Output	2-47

D2-12TR, Relay Output	2-48
D2-08CDR 4 pt., DC Input / 4pt., Relay Output	2-49
Glossary of Specification Terms	2-50
Chapter 3: CPU Specifications and Operations	3-1
CPU Overview	3-2
General CPU Features	3-2
DL230 CPU Features	3-2
DL240 CPU Features	3-2
DL250-1 CPU Features	3-3
DL260 CPU Features	3-3
CPU General Specifications	3-4
CPU Base Electrical Specifications	3-5
CPU Hardware Setup	3-6
Communication Port Pinout Diagrams	3-6
Port 1 Specifications	3-7
Port 2 Specifications	3-8
Selecting the Program Storage Media	3-9
Built-in EEPROM	3-9
EEPROM Sizes	3-9
EEPROM Operations	3-9
Installing the CPU	3-10
Connecting the Programming Devices	3-10
CPU Setup Information	3-11
Status Indicators	3-12
Mode Switch Functions	3-12
Changing Modes in the DL205 PLC	3-13
Mode of Operation at Power-up	3-13
Using Battery Backup	3-14
DL230 and DL240	3-14
DL250-1 and DL260	3-14
Battery Backup	3-14
Auxiliary Functions	3-15
Clearing an Existing Program	3-16
Initializing System Memory	3-16

Setting the Clock and Calendar	3-16
Setting the CPU Network Address	3-17
Setting Retentive Memory Ranges	3-17
Using a Password	3-18
Setting the Analog Potentiometer Ranges	3-19
CPU Operation	3-21
CPU Operating System	3-21
Program Mode Operation	3-22
Run Mode Operation	3-22
Read Inputs	3-23
Read Inputs from Specialty and Remote I/O	3-23
Service Peripherals and Force I/O	3-23
CPU Bus Communication	3-24
Update Clock, Special Relays and Special Registers	3-24
Solve Application Program	3-25
Solve PID Loop Equations	3-25
Write Outputs	3-25
Write Outputs to Specialty and Remote I/O	3-26
Diagnostics	3-26
I/O Response Time	3-27
Is Timing Important for Your Application?	3-27
Normal Minimum I/O Response	3-27
Normal Maximum I/O Response	3-27
Improving Response Time	3-28
CPU Scan Time Considerations	3-29
Initialization Process	3-30
Reading Inputs	3-30
Reading Inputs from Specialty I/O	3-31
Service Peripherals	3-31
CPU Bus Communication	3-32
Update Clock/Calendar, Special Relays, Special Registers	3-32
Writing Outputs	3-32
Writing Outputs to Specialty I/O	3-33
Diagnostics	3-33
Application Program Execution	3-34
PLC Numbering Systems	3-35

PLC Resources	3–35
V-Memory	3–36
Binary-Coded Decimal Numbers	3–36
Hexadecimal Numbers	3–36
Memory Map	3–37
Octal Numbering System	3–37
Discrete and Word Locations	3–37
V-Memory Locations for Discrete Memory Areas	3–37
Input Points (X Data Type)	3–38
Output Points (Y Data Type)	3–38
Control Relays (C Data Type)	3–38
Timers and Timer Status Bits (T Data type)	3–38
Timer Current Values (V Data Type)	3–39
Counters and Counter Status Bits (CT Data type)	3–39
Counter Current Values (V Data Type)	3–39
Word Memory (V Data Type)	3–39
Stages (S Data type)	3–40
Special Relays (SP Data Type)	3–40
Remote I/O Points (GX Data Type)	3–40
DL230 System V-memory	3–41
DL240 System V-memory	3–43
DL250–1 System V-memory (DL250 also)	3–46
DL260 System V-memory	3–49
DL205 Aliases	3–52
DL230 Memory Map	3–53
DL240 Memory Map	3–54
DL250–1 Memory Map (DL250 also)	3–55
DL260 Memory Map	3–56
X Input/Y Output Bit Map	3–57
Control Relay Bit Map	3–59
Stage Control/Status Bit Map	3–63
Timer and Counter Status Bit Maps	3–65
Remote I/O Bit Map	3–66

Chapter 4: System Design and Configuration	4-1
DL205 System Design Strategies	4-2
I/O System Configurations	4-2
Networking Configurations	4-2
Module Placement	4-3
Slot Numbering	4-3
Module Placement Restrictions	4-3
Automatic I/O Configuration	4-4
Manual I/O Configuration	4-4
Removing a Manual Configuration	4-5
Power-On I/O Configuration Check	4-5
I/O Points Required for Each Module	4-6
Calculating the Power Budget	4-7
Managing your Power Resource	4-7
CPU Power Specifications	4-7
Module Power Requirements	4-7
Power Budget Calculation Example	4-9
Power Budget Calculation Worksheet	4-10
Local Expansion I/O	4-11
D2-CM Local Expansion Module	4-11
D2-EM Local Expansion Module	4-12
D2-EXCBL-1 Local Expansion Cable	4-12
DL260 Local Expansion System	4-13
DL250-1 Local Expansion System	4-14
Expansion Base Output Hold Option	4-15
Enabling I/O Configuration Check using <i>DirectSOFT</i>	4-16
Expanding DL205 I/O	4-17
I/O Expansion Overview	4-17
Ethernet Remote Master, H2-ERM(-F)	4-17
Ethernet Remote Master Hardware Configuration	4-18
Installing the ERM Module	4-19
Ethernet Base Controller, H2-EBC(100)(-F)	4-22
Install the EBC Module	4-23
Set the Module ID	4-23
Insert the EBC Module	4-23
Network Cabling	4-24

Table of Contents

10BaseFL Network Cabling	4-25
Maximum Cable Length	4-25
Add a Serial Remote I/O Master/Slave Module	4-26
Configuring the CPU's Remote I/O Channel	4-27
Configure Remote I/O Slaves	4-29
Configuring the Remote I/O Table	4-29
Remote I/O Setup Program	4-30
Remote I/O Test Program	4-31
Network Connections to Modbus and <i>DirectNet</i>	4-32
Configuring Port 2 For <i>DirectNet</i>	4-32
Configuring Port 2 For Modbus RTU	4-32
Modbus Port Configuration	4-33
<i>DirectNET</i> Port Configuration	4-34
Network Slave Operation	4-35
Modbus Function Codes Supported	4-35
Determining the Modbus Address	4-35
If Your Host Software Requires the Data Type and Address	4-35
If Your Modbus Host Software Requires an Address ONLY	4-38
Example 1: V2100 584/984 Mode	4-40
Example 2: Y20 584/984 Mode	4-40
Example 3: T10 Current Value 484 Mode	4-40
Example 4: C54 584/984 Mode	4-40
Determining the <i>DirectNET</i> Address	4-40
Network Master Operation	4-41
Communications from a Ladder Program	4-44
Multiple Read and Write Interlocks	4-44
Network Modbus RTU Master Operation (DL260 only)	4-45
Modbus Function Codes Supported	4-45
Modbus Port Configuration	4-46
RS-485 Network (Modbus only)	4-47
RS-232 Network	4-47
Modbus Read from Network (MRX)	4-48
MRX Slave Memory Address	4-49
MRX Master Memory Addresses	4-49
MRX Number of Elements	4-49
MRX Exception Response Buffer	4-49
Modbus Write to Network (MWX)	4-50

MWX Slave Memory Address	4-51
MWX Master Memory Addresses	4-51
MWX Number of Elements	4-51
MWX Exception Response Buffer	4-51
MRX/MWX Example in <i>DirectSOFT</i>	4-52
Multiple Read and Write Interlocks	4-52
Non-Sequence Protocol (ASCII In/Out and PRINT)	4-54
Configure the DL260 Port 2 for Non-Sequence	4-54
RS-485 Network	4-55
RS-232 Network	4-55
Configure the DL250-1 Port 2 for Non-Sequence	4-56
RS-422 Network	4-57
RS-232 Network	4-57
Chapter 5: RLL and Intelligent Box (IBOX) Instructions	5-1
Introduction	5-2
Using Boolean Instructions	5-5
END Statement	5-5
Simple Rungs	5-5
Normally Closed Contact	5-6
Contacts in Series	5-6
Midline Outputs	5-6
Parallel Elements	5-7
Joining Series Branches in Parallel	5-7
Joining Parallel Branches in Series	5-7
Combination Networks	5-7
Comparative Boolean	5-8
Boolean Stack	5-8
Immediate Boolean	5-9
Boolean Instructions	5-10
Comparative Boolean	5-27
Immediate Instructions	5-33
Timer, Counter and Shift Register Instructions	5-41
Using Timers	5-41
Timer Example Using Discrete Status Bits	5-43

Table of Contents

Timer Example Using Comparative Contacts	5-43
Accumulating Timer (TMRA)	5-44
Accumulating Timer Example using Discrete Status Bits	5-45
Accumulator Timer Example Using Comparative Contacts	5-45
Counter Example Using Discrete Status Bits	5-47
Counter Example Using Comparative Contacts	5-47
Stage Counter Example Using Discrete Status Bits	5-49
Stage Counter Example Using Comparative Contacts	5-49
Up/Down Counter Example Using Discrete Status Bits	5-51
Up/Down Counter Example Using Comparative Contacts	5-51
Accumulator/Stack Load and Output Data Instructions	5-53
Logical Instructions (Accumulator)	5-71
Math Instructions	5-88
Transcendental Functions (DL260 only)	5-121
Bit Operation Instructions	5-123
Number Conversion Instructions (Accumulator)	5-130
Table Instructions	5-144
Clock/Calendar Instructions	5-175
CPU Control Instructions	5-177
Program Control Instructions	5-179
Interrupt Instructions	5-187
Intelligent I/O Instructions	5-191
Network Instructions	5-193
Message Instructions	5-197
Modbus RTU Instructions (DL260)	5-205
Modbus Read from Network (MRX)	5-205
Modbus Write to Network (MWX)	5-208
ASCII Instructions (DL260)	5-211
Intelligent Box (IBox) Instructions (DL250-1/DL260)	5-230

VOLUME TWO:

TABLE OF CONTENTS



Chapter 6: Drum Instruction Programming (DL250-1/DL260 only)	.6-1
Introduction	.6-2
Purpose	.6-2
Drum Terminology	.6-2
Drum Chart Representation	.6-3
Output Sequences	.6-3
Step Transitions	.6-4
Drum Instruction Types	.6-4
Timer-Only Transitions	.6-4
Timer and Event Transitions	.6-5
Event-Only Transitions	.6-6
Counter Assignments	.6-6
Last Step Completion	.6-7
Overview of Drum Operation	.6-8
Drum Instruction Block Diagram	.6-8
Powerup State of Drum Registers	.6-9
Drum Control Techniques	.6-10
Drum Control Inputs	.6-10
Self-Resetting Drum	.6-11
Initializing Drum Outputs	.6-11
Using Complex Event Step Transitions	.6-11
Drum Instruction	.6-12
Timed Drum with Discrete Outputs (DRUM)	.6-12
Event Drum (EDRUM)	.6-14
Handheld Programmer Drum Mnemonics	.6-16

Masked Event Drum with Discrete Outputs (MDRMD)	6-19
Masked Event Drum with Word Output (MDRMW)	6-21
Chapter 7: RLL^{PLUS} Stage Programming	7-1
Introduction to Stage Programming	7-2
Overcoming “Stage Fright”	7-2
Learning to Draw State Transition Diagrams	7-3
Introduction to Process States	7-3
The Need for State Diagrams	7-3
A 2-State Process	7-3
RLL Equivalent	7-4
Stage Equivalent	7-4
Let’s Compare	7-5
Initial Stages	7-5
What Stage Bits Do	7-6
Stage Instruction Characteristics	7-6
Using the Stage Jump Instruction for State Transitions	7-7
Stage Jump, Set, and Reset Instructions	7-7
Stage Program Example: Toggle On/Off Lamp Controller	7-8
A 4-State Process	7-8
Four Steps to Writing a Stage Program	7-9
Stage Program Example: A Garage Door Opener	7-10
Garage Door Opener Example	7-10
Draw the Block Diagram	7-10
Draw the State Diagram	7-11
Add Safety Light Feature	7-12
Modify the Block Diagram and State Diagram	7-12
Using a Timer Inside a Stage	7-13
Add Emergency Stop Feature	7-14
Exclusive Transitions	7-14
Stage Program Design Considerations	7-15
Stage Program Organization	7-15
How Instructions Work Inside Stages	7-16
Using a Stage as a Supervisory Process	7-17
Stage Counter	7-17

Unconditional Outputs	7-18
Power Flow Transition Technique	7-18
Parallel Processing Concepts	7-19
Parallel Processes	7-19
Converging Processes	7-19
Convergence Stages (CV)	7-19
Convergence Jump (CVJMP)	7-20
Convergence Stage Guidelines	7-20
Managing Large Programs	7-21
Stage Blocks (BLK, BEND)	7-21
Block Call (BCALL)	7-22
RLL^{PLUS} (Stage) Instructions	7-23
Stage (SG)	7-23
Initial Stage (ISG)	7-24
Jump (JMP)	7-24
Not Jump (NJMP)	7-24
Converge Stage (CV) and Converge Jump (CVJMP)	7-25
Block Call (BCALL)	7-27
Block (BLK)	7-27
Block End (BEND)	7-27
Stage View in <i>DirectSOFT</i>	7-28
Questions and Answers about Stage Programming	7-29
Chapter 8: PID Loop Operation	8-1
DL250-1 and DL260 PID Loop Features	8-2
Main Features	8-2
Introduction to PID Control	8-4
Why use PID Control?	8-4
Introducing DL205 PID Control	8-6
Process Control Definitions	8-8
PID Loop Operation	8-9
Position Form of the PID Equation	8-9
Reset Windup Protection	8-10
Freeze Bias	8-11
Adjusting the Bias	8-11

Table of Contents

Step Bias Proportional to Step Change in SP	8-12
Eliminating Proportional, Integral or Derivative Action	8-12
Velocity Form of the PID Equation	8-12
Bumpless Transfer	8-13
Loop Alarms	8-13
Loop Operating Modes	8-14
Special Loop Calculations	8-14
Ten Steps to Successful Process Control	8-16
PID Loop Setup	8-18
Some Things to Do and Know Before Starting	8-18
PID Error Flags	8-18
Establishing the Loop Table Size and Location	8-18
Loop Table Word Definitions	8-20
PID Mode Setting 1 Bit Descriptions (Addr + 00)	8-21
PID Mode Setting 2 Bit Descriptions (Addr + 01)	8-22
Mode/Alarm Monitoring Word (Addr + 06)	8-23
Ramp/Soak Table Flags (Addr + 33)	8-23
Ramp/Soak Table Location (Addr + 34)	8-24
Ramp/Soak Table Programming Error Flags (Addr + 35)	8-24
PV Auto Transfer (Addr + 36) from I/O Module Base/Slot/Channel Option	8-25
PV Auto Transfer (Addr + 36) from V-memory Option	8-25
Control Output Auto Transfer (Addr + 37)	8-25
Configure the PID Loop	8-26
PID Loop Tuning	8-41
Open-Loop Test	8-41
Manual Tuning Procedure	8-42
Alternative Manual Tuning Procedures by Others	8-44
Tuning PID Controllers	8-44
Auto Tuning Procedure	8-45
Use <i>DirectSOFT</i> Data View with PID View	8-49
Open a New Data View Window	8-49
Open PID View	8-50
Using the Special PID Features	8-52
How to Change Loop Modes	8-52
Operator Panel Control of PID Modes	8-53
PLC Modes Effect on Loop Modes	8-53

Loop Mode Override	8-53
PV Analog Filter	8-54
Creating an Analog Filter in Ladder Logic	8-55
Use the <i>DirectSOFT</i> 5 Filter Intelligent Box (IBOX) Instruction	8-56
FilterB Example	8-56
Ramp/Soak Generator	8-57
Introduction	8-57
Ramp/Soak Table	8-58
Ramp/Soak Table Flags	8-60
Ramp/Soak Generator Enable	8-60
Ramp/Soak Controls	8-60
Ramp/Soak Profile Monitoring	8-61
Ramp/Soak Programming Errors	8-61
Testing Your Ramp/Soak Profile	8-61
DirectSOFT Ramp/Soak Example	8-62
Setup the Profile in PID Setup	8-62
Program the Ramp/Soak Control in Relay Ladder	8-62
Test the Profile	8-63
Cascade Control	8-64
Introduction	8-64
Cascaded Loops in the DL205 CPU	8-65
Tuning Cascaded Loops	8-66
Time-Proportioning Control	8-67
On/Off Control Program Example	8-68
Feedforward Control	8-69
Feedforward Example	8-70
PID Example Program	8-71
Program Setup for the PID Loop	8-71
Troubleshooting Tips	8-74
Glossary of PID Loop Terminology	8-76
Bibliography	8-78
Chapter 9: Maintenance and Troubleshooting	9-1
Hardware Maintenance	9-2

Table of Contents

Standard Maintenance	9-2
Air Quality Maintenance	9-2
Low Battery Indicator	9-2
CPU Battery Replacement	9-2
Diagnostics	9-3
Diagnostics	9-3
Fatal Errors	9-3
Non-fatal Errors	9-3
Finding Diagnostic Information	9-4
V-memory Locations Corresponding to Error Codes	9-4
Special Relays (SP) Corresponding to Error Codes	9-5
I/O Module Codes	9-6
Error Message Tables	9-7
System Error Codes	9-8
Program Error Codes	9-9
CPU Error Indicators	9-10
PWR Indicator	9-11
Incorrect Base Power	9-11
Faulty CPU	9-11
Device or Module causing the Power Supply to Shutdown	9-12
Power Budget Exceeded	9-12
Run Indicator	9-13
CPU Indicator	9-13
BATT Indicator	9-13
Communications Problems	9-13
I/O Module Troubleshooting	9-14
Things to Check	9-14
I/O Diagnostics	9-14
Some Quick Steps	9-15
Testing Output Points	9-16
Handheld Programmer Keystrokes Used to Test an Output Point	9-16
Noise Troubleshooting	9-17
Electrical Noise Problems	9-17
Reducing Electrical Noise	9-17
Machine Startup and Program Troubleshooting	9-18

Syntax Check 9-18

Duplicate Reference Check 9-19

TEST-PGM and TEST-RUN Modes 9-20

Special Instructions 9-22

Run Time Edits 9-24

Forcing I/O Points 9-26

Regular Forcing with Direct Access 9-28

Bit Override Forcing 9-29

Bit Override Indicators 9-29

Appendix A: Auxiliary Functions A-1

Introduction A-2

What are Auxiliary Functions? A-2

Accessing AUX Functions via *DirectSOFT* A-3

Accessing AUX Functions via the Handheld Programmer A-3

AUX 2* — RLL Operations A-4

AUX 21-24 A-4

AUX 21 Check Program A-4

AUX 22 Change Reference A-4

AUX 23 Clear Ladder Range A-4

AUX 24 Clear Ladders A-4

AUX 3* — V-memory Operations A-5

AUX 31 A-5

AUX 31 Clear V-Memory A-5

AUX 4* — I/O Configuration A-5

AUX 41-46 A-5

AUX 41 Show I/O Configuration A-5

AUX 42 I/O Diagnostics A-5

AUX 44 Power-up Configuration Check A-5

AUX 45 Select Configuration A-6

AUX 46 to I/O Configuration A-6

AUX 5* — CPU Configuration A-7

AUX 51-5C A-7

AUX 51 Modify Program Name A-7

AUX 52 Display/Change Calendar A-7

AUX 53 Display Scan Time A-8

Table of Contents

AUX 54 Initialize Scratchpad	A-8
AUX 55 Set Watchdog Timer	A-8
AUX 56 CPU Network Address	A-8
AUX 57 Set Retentive Ranges	A-9
AUX 58 Test Operations	A-9
AUX 59 Bit Override	A-10
AUX 5B Counter Interface Configuration	A-10
AUX 5C Display Error History	A-11
AUX 6* — Handheld Programmer Configuration	A-12
AUX 61, 62 and 65	A-12
AUX 61 Show Revision Numbers	A-12
AUX 62 Beeper On/Off	A-12
AUX 65 Run Self Diagnostics	A-12
AUX 7* - EEPROM Operations	A-12
AUX 71 - 76	A-12
Transferrable Memory Areas	A-13
AUX 71 CPU to HPP EEPROM	A-13
AUX 72 HPP EEPROM to CPU	A-13
AUX 73 Compare HPP EEPROM to CPU	A-13
AUX 74 HPP EEPROM Blank Check	A-13
AUX 75 Erase HPP EEPROM	A-13
AUX 76 Show EEPROM Type	A-13
AUX 8* — Password Operations	A-14
AUX 81 - 83	A-14
AUX 81 Modify Password	A-14
AUX 82 Unlock CPU	A-14
AUX 83 Lock CPU	A-14
Appendix B: DL205 Error Codes	B-1
Appendix C: Instruction Execution Times	C-1
Introduction	C-2
V-Memory Data Registers	C-2
V-Memory Bit Registers	C-2
How to Read the Tables	C-2
Boolean Instructions	C-3

Comparative Boolean Instructions	C-4
Bit of Word Boolean Instructions	C-13
Immediate Instructions	C-14
Timer, Counter and Shift Register Instructions	C-15
Accumulator Data Instructions	C-16
Logical Instructions	C-18
Math Instructions	C-20
Differential Instructions	C-23
Bit Instructions	C-24
Number Conversion Instructions	C-25
Table Instructions	C-25
CPU Control Instructions	C-27
Program Control Instructions	C-27
Interrupt Instructions	C-28
Network Instructions	C-28
Intelligent I/O Instructions	C-28
Message Instructions	C-29
RLL ^{PLUS} Instructions	C-29
DRUM Instructions	C-29
Clock / Calender Instructions	C-30
Modbus Instructions	C-30
ASCII Instructions	C-30
Appendix D: Special Relays	D-1
DL230 CPU Special Relays	D-2
Startup and Real-Time Relays	D-2
CPU Status Relays	D-2
System Monitoring	D-2
Accumulator Status	D-3
Counter Interface Module Relays	D-3
Equal Relays for Multi-step Presets with Up/Down Counter #1 / DL230 (for use with a Counter Interface Module)	D-4

DL240/DL250-1/DL260 CPU Special Relays	D-5
Startup and Real-Time Relays	D-5
CPU Status Relays	D-5
System Monitoring Relays	D-6
Accumulator Status Relays	D-6
Counter Interface Module Relays	D-7
Communications Monitoring Relays	D-8
Equal Relays for Multi-step Presets with Up/Down Counter #1 (for use with a Counter Interface Module)	D-9
Equal Relays for Multi-step Presets with Up/Down Counter #2 (for use with a Counter Interface Module)	D-10
Appendix E: PLC Memory	E-1
DL205 PLC Memory	E-2
Non-volatile V-memory in the DL205	E-3
Appendix F: DL205 Product Weight Table	F-1
DL205 Product Weight Table	F-2
Appendix G: ASCII Table	G-1
ASCII Conversion Table	G-2
Appendix H: Numbering Systems	H-1
Introduction	H-2
Binary Numbering System	H-2
Hexadecimal Numbering System	H-3
Octal Numbering System	H-4
Binary Coded Decimal (BCD) Numbering System	H-5
Real (Floating Point) Numbering System	H-5
BCD/Binary/Decimal/Hex/Octal -What is the Difference?	H-6
Data Type Mismatch	H-7
Signed vs. Unsigned Integers	H-8
AutomationDirect.com Products and Data Types	H-9

*Direct*LOGIC PLCsH-9
 C-more/C-more Micro-Graphic PanelsH-9

Appendix I: European Union Directives (CE)I-1

European Union (EU) DirectivesI-2
 Member CountriesI-2
 Applicable DirectivesI-2
 ComplianceI-2
 General SafetyI-3
 Special Installation ManualI-4
 Other Sources of InformationI-4

Basic EMC Installation GuidelinesI-4
 EnclosuresI-4
 AC Mains FiltersI-5
 Suppression and FusingI-5
 Internal Enclosure GroundingI-5
 Equi-potential GroundingI-6
 Communications and Shielded CablesI-6
 Analog and RS232 CablesI-7
 Shielded Cables within EnclosuresI-7
 Analog Modules and RF InterferenceI-8
 Network IsolationI-8
 DC Powered VersionsI-8
 Items Specific to the DL205I-9

Index

Notes

GETTING STARTED



In This Chapter...

Introduction	1-2
Conventions Used	1-3
DL205 System Components	1-4
Programming Methods	1-7
<i>Direct</i> LOGIC™ Part Numbering System	1-8
Quick Start for PLC Validation and Programming	1-10
Steps to Designing a Successful System	1-13

Introduction

The Purpose of this Manual

Thank you for purchasing our DL205 family of products. This manual shows you how to install, program, and maintain the equipment. It also helps you understand how to interface them to other devices in a control system.

This manual contains important information for personnel who will install DL205 PLCs and components and for the PLC programmer. If you understand PLC systems, our manuals will provide all the information you need to start and keep your system up and running.

Where to Begin

If you already understand PLCs please read Chapter 2, “Installation, Wiring, and Specifications”, and proceed on to other chapters as needed. Keep this manual handy for reference when you have questions. If you are a new DL205 customer, we suggest you read this manual completely to understand the wide variety of features in the DL205 family of products. We believe you will be pleasantly surprised with how much you can accomplish with our products.

Supplemental Manuals

If you have purchased operator interfaces or *DirectSOFT*, you will need to supplement this manual with the manuals that are written for these products.

Technical Support

We strive to make our manuals the best in the industry. We rely on your feedback to let us know if we are reaching our goal. If you cannot find the solution to your particular application, or, if for any reason you need technical assistance, please call us at:

770-844-4200

Our technical support group will work with you to answer your questions. They are available Monday through Friday from 9:00 A.M. to 6:00 P.M. Eastern Time. We also encourage you to visit our web site where you can find technical and non-technical information about our products and our company.

<http://www.automationdirect.com>

If you have a comment, question or suggestion about any of our products, services, or manuals, please fill out and return the ‘Suggestions’ card that was included with this manual.

Conventions Used



When you see the “notepad” icon in the left–hand margin, the paragraph to its immediate right will be a special note.

The word **NOTE** in boldface will mark the beginning of the text.




When you see the “exclamation mark” icon in the left–hand margin, the paragraph to its immediate right will be a warning. This information could prevent injury, loss of property, or even death (in extreme cases).

The word **WARNING** in boldface will mark the beginning of the text.

Key Topics for Each Chapter

The beginning of each chapter will list the key topics that can be found in that chapter.

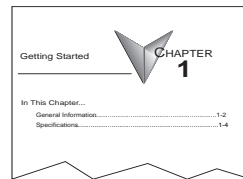

DL205 System Components

The DL205 family is a versatile product line that provides a wide variety of features in an extremely compact package. The CPUs are small, but offer many instructions normally only found in larger, more expensive systems. The modular design also offers more flexibility in the fast moving industry of control systems. The following is a summary of the major DL205 system components.

CPUs

There are four feature-enhanced CPUs in this product line, the DL230, DL240, DL250-1 and DL260. All CPUs include built-in communication ports. Each CPU offers a large amount of program memory, a substantial instruction set and advanced diagnostics. The DL250-1 features drum timers, floating-point math, 4 built-in PID loops with automatic tuning and 2 bases of local expansion capability.

The DL260 features ASCII IN/OUT and extended MODBUS communications, table and trigonometric instructions, 16 PID loops with autotuning and up to 4 bases of local expansion. Details of these CPU features and more are covered in Chapter 3, CPU Specifications and Operation.

Bases

Four base sizes are available: 3, 4, 6 and 9 slot. The DL205 PLCs use bases that can be expanded. The part numbers for these bases end with -1. These bases have a connector for local expansion located on the right end of the base. They can serve in local, local expansion and remote I/O configurations. All bases include a built-in power supply. The bases with the -1 suffix can replace existing bases without a suffix if expansion is required.

I/O Configuration


The DL230 and DL240 CPUs can support up to 256 local I/O points. The DL250-1 can support up to 768 local I/O points with up to two expansion bases. The DL260 can support up to 1280 local I/O points with up to four expansion bases. These points can be assigned as input or output points. The DL240, DL250-1 and DL260 systems can also be expanded by adding remote I/O points. The DL250-1 and DL260 provide a built-in master for remote I/O networks. The I/O configurations are explained in Chapter 4, System Design and Configuration. I/O Modules

I/O Modules

The DL205 has some of the most powerful modules in the industry. A complete range of discrete modules which support 24 VDC, 110/220 VAC and up to 10A relay outputs (subject to derating) are offered. The analog modules provide 12 and 16 bit resolution and several selections of input and output signal ranges (including bipolar). Several specialty and communications modules are also available.


DL205 System Diagrams

The diagram below shows the major components and configurations of the DL205 system. The next two pages show specific components for building your system.

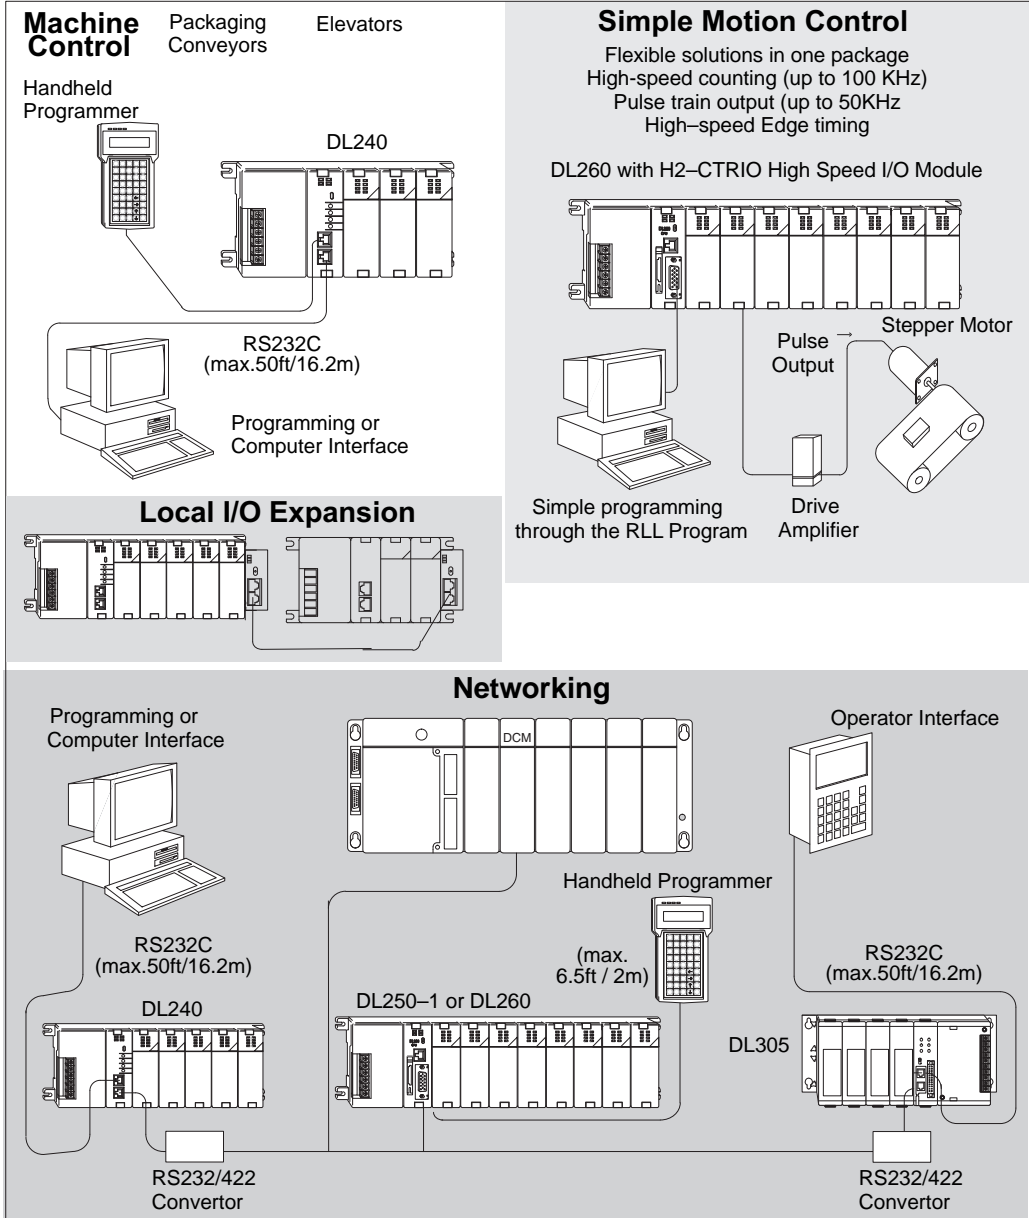

DirectLOGIC DL205 Family

1

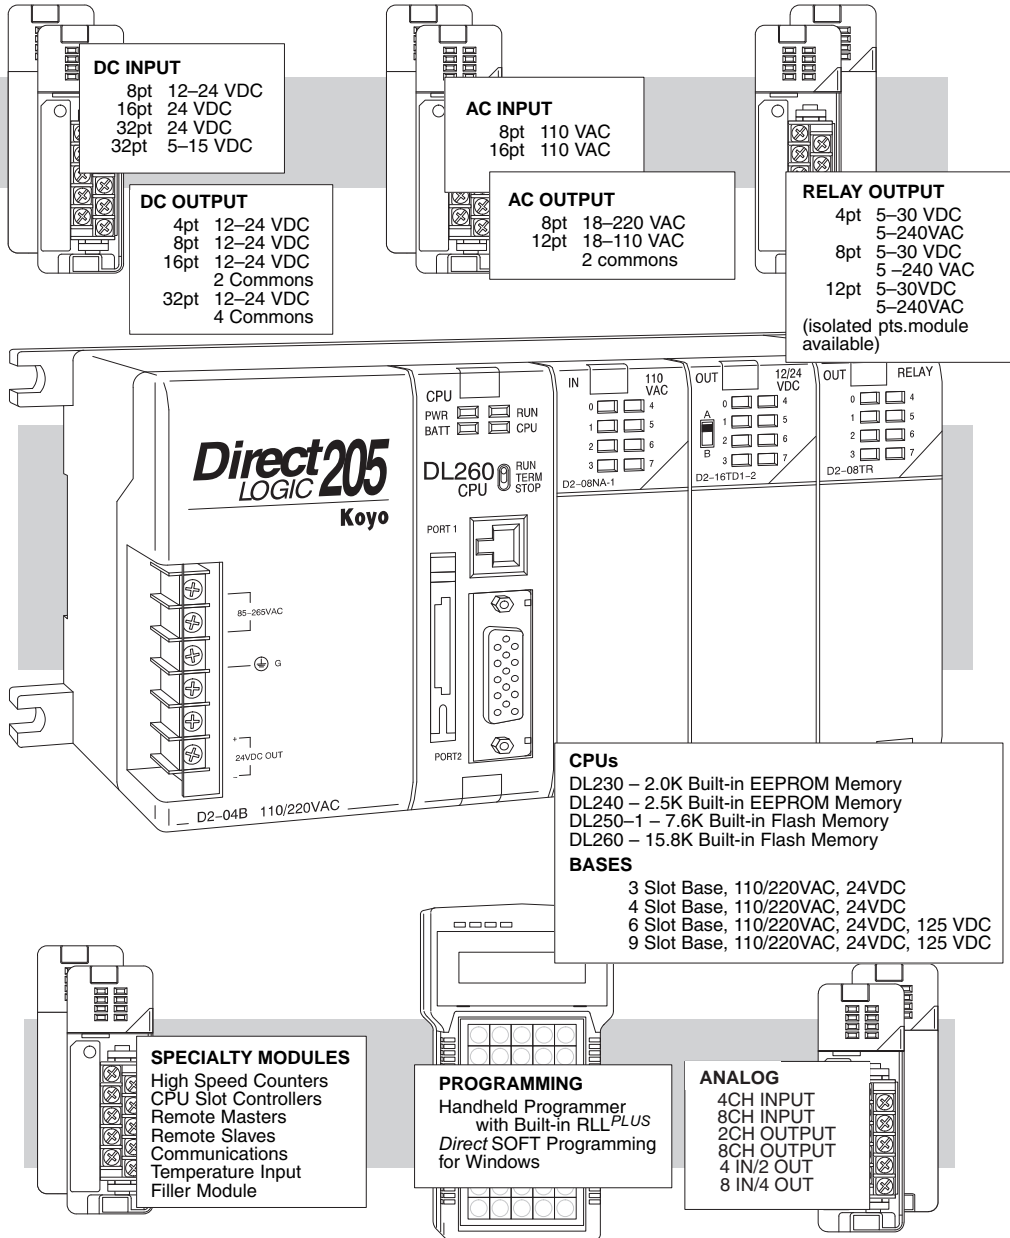

Programming Methods

There are two programming methods available for the DL205 CPUs, RLL (Relay Ladder Logic) and RLL^{PLUS} (Stage Programming). Both the *DirectSOFT5* programming package and the handheld programmer support RLL and Stage.

***DirectSOFT* Programming for Windows.**

The DL205 can be programmed with one of the most advanced programming packages in the industry --*DirectSOFT5*. *DirectSOFT5* is a Windows-based software package that supports many Windows features you already know, such as cut and paste between applications, point and click editing, viewing and editing multiple application programs at the same time, etc. *DirectSOFT5* universally supports the *DirectLOGIC* CPU families. This means you can use the same *DirectSOFT5* package to program DL05, DL06, DL105, DL205, DL305, DL405 or any new CPUs we may add to our product line. There is a separate manual that discusses the *DirectSOFT5* programming software which is included with your software package.


Handheld Programmer

All DL205 CPUs have a built-in programming port for use with the handheld programmer (D2-HPP). The handheld programmer can be used to create, modify and debug your application program. A separate manual that discusses the DL205 Handheld Programmer is available.


DirectLOGIC™ Part Numbering System

As you examine this manual, you will notice there are many different products available. Sometimes it is difficult to remember the specifications for any given product. However, if you take a few minutes to understand the numbering system, it may save you some time and confusion. The charts below show how the part numbering systems work for each product category. Part numbers for accessory items such as cables, batteries, memory cartridges, etc., are typically an abbreviation of the description for the item.


CPUs	
Specialty CPUs	
DL05/06 Product family	D0/F0
DL105 Product family	D1/F1
DL205 Product family	D2/F2
DL305 Product family	D3/F3
DL405 Product family	D4/F4
Class of CPU / Abbreviation	230...,330...,430...
Denotes a differentiation between similar modules	-1, -2, -3, -4

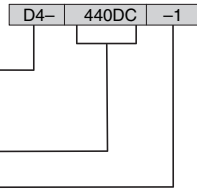


Bases	
DL205 Product family	D2/F2
DL305 Product family	D3/F3
DL405 Product family	D4/F4
Number of slots	##B
Type of Base	DC or empty

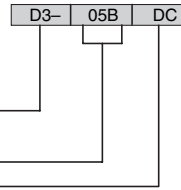

Discrete I/O	
DL05/06 Product family	D0/F0
DL205 Product family	D2/F2
DL305 Product family	D3/F3
DL405 Product family	D4/F4
Number of points	04/08/12/16/32/64
Input	N
Output	T
Combination	C
AC	A
DC	D
Either	E
Relay	R
Current Sinking	1
Current Sourcing	2
Current Sinking/Sourcing	3
High Current	H
Isolation	S
Fast I/O	F
Denotes a differentiation between similar modules	-1, -2, -3, -4

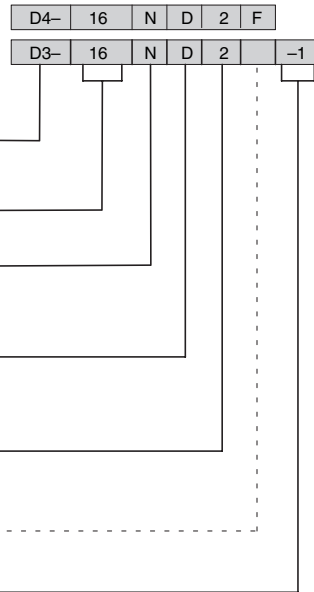

Analog I/O	
DL05/06 Product family	D0/F0
DL205 Product family	D2/F2
DL305 Product family	D3/F3
DL405 Product family	D4/F4
Number of channels	02/04/08/16
Input (Analog to Digital)	AD
Output (Digital to Analog)	DA
Combination	AND
Isolated	S
Denotes a differentiation between Similar modules	-1, -2, -3, -4

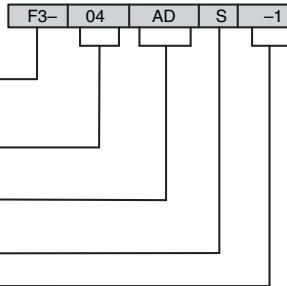


Alternate example of Analog I/O using abbreviations




note: -n indicates thermocouple type such as: J, K, T, R, S or E

Communication and Networking	
Special I/O and Devices	
Programming	
DL205 Product family	D2/F2
DL305 Product family	D3/F3
DL405 Product family	D4/F4
Name Abbreviation	see example

 

CoProcessors and ASCII BASIC Modules	
DL205 Product family	D2/F2
DL305 Product family	D3/F3
DL405 Product family	D4/F4
CoProcessor	CP
ASCII BASIC	AB
64K memory	64
128K memory	128
512K memory	512
Radio modem	R
Telephone modem	T

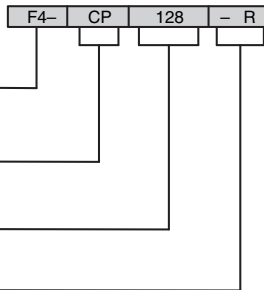

Quick Start for PLC Validation and Programming

If you have experience using PLCs, or want to setup a quick example, this section is what you want to use. This example is not intended to explain everything needed to start-up your system. It is only intended to provide a general picture of what is needed to get your system powered-up.

Step 1: Unpack the DL205 Equipment


Unpack the DL205 equipment and verify you have the parts necessary to build this demonstration system. The minimum parts needed are as follows:

- Base
- CPU
- A discrete input module such as a D2-16ND3-2 DC or a F2-08SIM input simulator module
- A discrete output module such as a D2-16TD1-2 DC
- *Power cord
- *Hook up wire
- *One or more toggle switches (if not using the input simulator module)
- *A screwdriver, blade or Phillips type

*These items are not supplied with your PLC.

You will need at least one of the following programming options:


- *DirectSOFT5* Programming Software, *DirectSOFT5* Manual, and a programming cable (connects the CPU to a personal computer), or
- D2-HPP Handheld Programmer and the Handheld Programmer Manual.

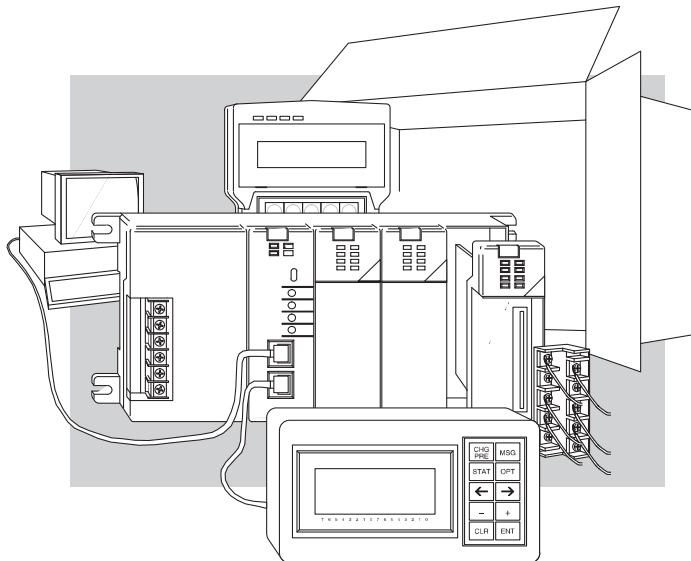

Step 2: Install the CPU and I/O Modules

Insert the CPU and I/O into the base. The CPU must be inserted into the first slot of the base (next to the power supply).


- Each unit has a plastic retaining clip at the top and bottom. Slide the retainer clips to the out position before installing the module.
- With the unit square to the base, slide it in using the upper and lower guides.
- Gently push the unit back until it is firmly seated in the backplane.
- Secure the unit to the base by pushing in the retainer clips.

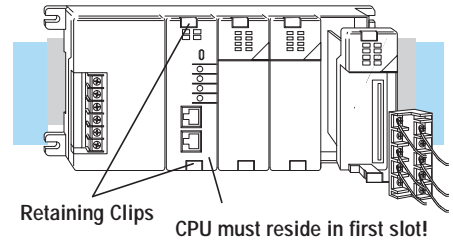

Placement of discrete, analog and relay modules are not critical and may go in any slot in any base, however for this example, install the output module in the slot next to the CPU and the input module in the next. Limiting factors for other types of modules are discussed in Chapter 4, System Design and Configuration. You must also make sure you do not exceed the power budget for each base in your system configuration. Power budgeting is also discussed in Chapter 4.


Step 3: Remove Terminal Strip Access Cover

Remove the terminal strip cover. It is a small strip of clear plastic that is located on the base power supply.

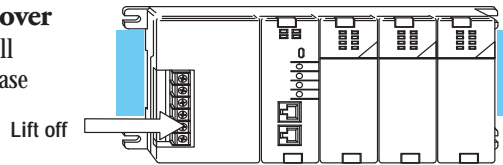

Step 4: Add I/O Simulation


To finish this quick start exercise or study other examples in this manual, you will need to install an input simulator module (or wire an input switch as shown below), and add an output module. Using an input simulator is the quickest way to get physical inputs for checking out the system or a new program. To monitor output status, any discrete output module will work.

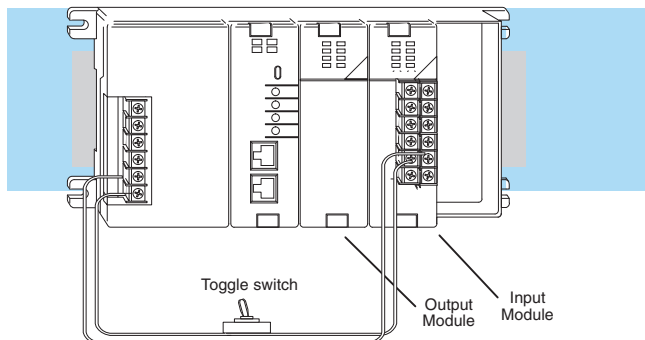

Wire the switches or other field devices prior to applying power to the system to ensure a point is not accidentally turned on during the wiring operation. This example uses DC input and output modules. Wire the input module, X0, to the toggle switch and 24VDC auxiliary power supply on the CPU terminal strip as shown. Chapter 2, Installation, Wiring, and Specifications provides a list of I/O wiring guidelines.


Step 5: Connect the Power Wiring

Connect the wires as shown. Observe all precautions stated earlier in this manual. For details on wiring see Chapter 2 Installation, Wiring, and Specifications. When the wiring is complete, replace the CPU and module covers. Do not apply power at this time.

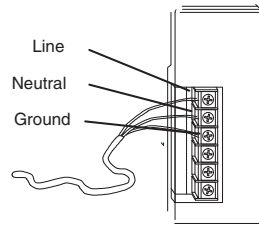

Step 6: Connect the Programmer

Either connect the programming cable connected to a computer loaded with *DirectSOFT* Programming Software or a D2-HPP Handheld Programmer (comes with programming cable) to the top port of the CPU.

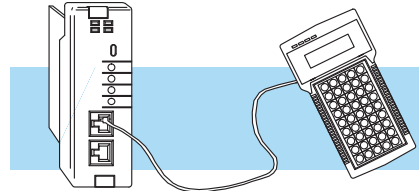

Step 7: Switch On the System Power

Apply power to the system and ensure the PWR indicator on the CPU is on. If not, remove power from the system, check all wiring and refer to the troubleshooting section in Chapter 9 for assistance.

Step 8: Enter the Program


Slide the switch on the CPU to the STOP position (250-1 / 260 only) and then back to the TERM position. This puts the CPU in the program mode and allows access to the CPU program. Edit a *DirectSOFT* program using the relay ladder diagram below and load it into the PLC. If using an HPP, the PGM indicator should be illuminated on the HPP. Enter the following keystrokes on the HPP:



NOTE: It is not necessary for you to configure the I/O for this system since the DL205 CPUs automatically examine any installed modules and establish the correct configuration.

Handheld Program Keystrokes

\$ STR	→	B 1	ENT
GX OUT	→	C 2	ENT

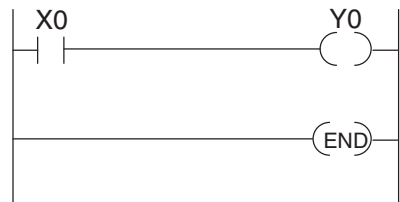


After entering the example program put the CPU in the RUN mode with *DirectSOFT* or after entering the program using the HPP, slide the switch from the TERM position to the RUN position and back to TERM. The RUN indicator on the CPU will come on indicating the CPU has entered the run mode. If not repeat Step 8 insuring the program is entered properly or refer to the troubleshooting guide in chapter 9.

During Run mode operation, the output status indicator “0” on the output module should reflect the switch status. When the switch is on the output should be on.

Steps to Designing a Successful System


Step 1: Review the Installation Guidelines

Always make safety your first priority in any system application. Chapter 2 provides several guidelines that will help provide a safer, more reliable system. This chapter also includes wiring guidelines for the various system components.

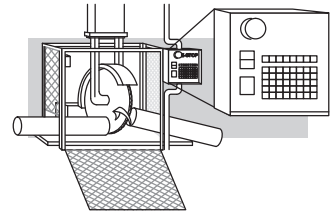

Step 2: Understand the CPU Setup Procedures


The CPU is the heart of your automation system and is explained in Chapter 3. Make sure you take time to understand the various features and setup requirements.

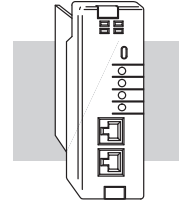

Step 3: Understand the I/O System


Configurations

It is important to understand how your local I/O system can be configured. It is also important to understand how the system Power Budget is calculated. This can affect your I/O placement and/or configuration options. See Chapter 4 for more information.

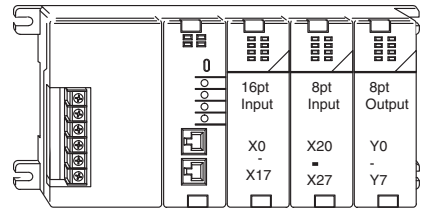

Step 4: Determine the I/O Module Specifications and Wiring Characteristics


There are many different I/O modules available with the DL205 system. Chapter 2 provides the specifications and wiring diagrams for the discrete I/O modules.

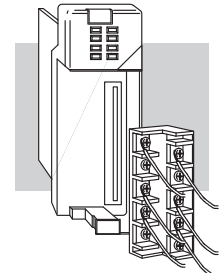

NOTE: Analog and specialty modules have their own manuals and are not included in this manual.

Step 5: Understand the System Operation

Before you begin to enter a program, it is very helpful to understand how the DL205 system processes information. This involves not only program execution steps, but also involves the various modes of operation and memory layout characteristics. See Chapter 3 for more information.

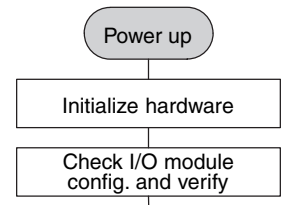


Step 6: Review the Programming Concepts


The DL205 provides four main approaches to solving the application program, including the PID loop task depicted in the next figure.

- RLL diagram style programming is the best tool for solving boolean logic and general CPU register/accumulator manipulation. It includes dozens of instructions, which will augment drums, stages and loops.
- The DL250-1 and DL260 have four timer/event drum types, each with up to 16 steps. They offer both time and/or event-based step transitions. Drums are best for a repetitive process based on a single series of steps.
- Stage programming, called RLL *PLUS*, is based on state-transition diagrams. Stages divide the ladder program into sections which correspond to the states in a flow chart of your process.
- The DL260 PID loop operation uses setup tables to configure 16 loops. The DL250-1 PID loop operation uses setup to configure 4 loops. Features include: auto tuning, alarms, SP ramp/soak generation and more.


Standard RLL Programming
(see Chapter 5)

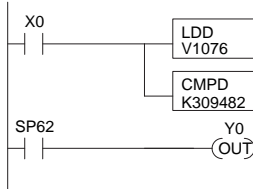


Stage Programming
(see Chapter 7)

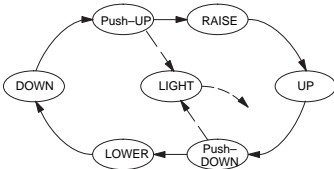

Timer/Event Drum Sequencer
(see Chapter 6)

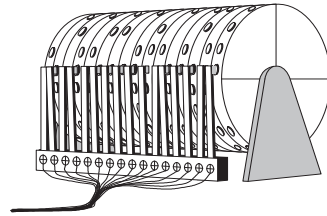

PID Loop Operation
(see Chapter 8)

 

Step 7: Choose the Instructions

Once you have installed the system and understand the theory of operation, you can choose from one of the most powerful instruction sets available.

Step 8: Understand the Maintenance and Troubleshooting Procedures

Equipment failures can occur at any time. Switches fail, batteries need to be replaced, etc. In most cases, the majority of the troubleshooting and maintenance time is spent trying to locate the problem. The DL205 system has many built-in features that help you quickly identify problems. Refer to Chapter 9 for diagnostics.

